74548

TANK LID LABEL INSTALLATION

POSE DE L'ÉTIQUETTE SUR LE COUVERCLE DU RÉSERVOIR

Order RP71175▲ for models C43906-WH & C43906-WH-RSL
Order RP71178▲ for models C43904, C43904-WH-RSL & C43804-WH-RSL
Order RP71180▲ for models C43801-WH, C43901-WH & C41901-WH
▲ Specify Color

Commandez la trousse RP71175▲ pour les modèles C43906-WH et C43906-WH-RSL
Commandez la trousse RP71178▲ pour les modèles C43904, C43904-WH-RSL et C43804-WH-RSL
Commandez la trousse RP71180▲ pour les modèles C43801-WH, C43901-WH et C41901-WH
▲ Préciser la couleur

MODÈLES C43801 ET C43901

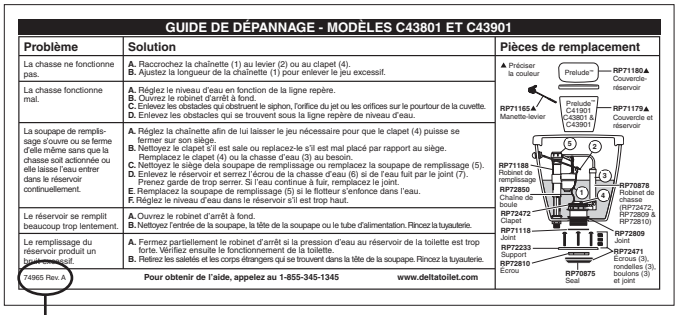

GUIDE DE DÉPANNAGE - MODÈLES C43801 ET C43901

Problème	Solution
La chasse ne fonctionne pas.	**A.** Raccrochez la chaînette (1) au levier (2) ou au clapet (4). **B.** Ajustez la longueur de la chaînette (1) pour enlever le jeu excessif.
La chasse fonctionne mal.	**A.** Réglez le niveau d'eau en fonction de la ligne repère. **B.** Ouvrez le robinet d'arrêt à fond. **C.** Enlevez les obstacles qui obstruent le siphon, l'orifice du jet ou les orifices sur le pourtour de la cuvette. **D.** Enlevez les obstacles qui se trouvent sous la ligne repère de niveau d'eau.
La soupape de remplissage s'ouvre ou se ferme d'elle même sans que la chasse soit actionnée ou elle laisse l'eau entrer dans le réservoir continuellement.	**A.** Réglez la chaînette afin de lui laisser le jeu nécessaire pour que le clapet (4) puisse se fermer sur son siège. **B.** Nettoyez le clapet s'il est sale ou replacez-le s'il est mal placé par rapport au siège. Remplacez le clapet (4) ou la chasse d'eau (3) au besoin. **C.** Nettoyez le siège dela soupape de remplissage ou remplacez la soupape de remplissage (5). **D.** Enlevez le réservoir et serrez l'écrou de la chasse d'eau (6) si de l'eau fuit par le joint (7). Prenez garde de trop serrer. Si l'eau continue à fuir, remplacez le joint. **E.** Remplacez la soupape de remplissage (5) si le flotteur s'enfonce dans l'eau. **F.** Réglez le niveau d'eau dans le réservoir s'il est trop haut.
Le réservoir se remplit beaucoup trop lentement.	**A.** Ouvrez le robinet d'arrêt à fond. **B.** Nettoyez l'entrée de la soupape, la tête de la soupape ou le tube d'alimentation. Rincez la tuyauterie.
Le remplissage du réservoir produit un bruit excessif.	**A.** Fermez partiellement le robinet d'arrêt si la pression d'eau au réservoir de la toilette est trop forte. Vérifiez ensuite le fonctionnement de la toilette. **B.** Retirez les saletés et les corps étrangers qui se trouvent dans la tête de la soupape. Rincez la tuyauterie.

74965 Rev. A

Pour obtenir de l'aide, appelez au 1-855-345-1345 **www.deltatoilet.com**

Pièces de remplacement

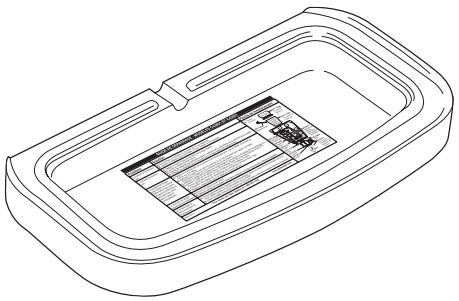

Apposez l'étiquette **(74965)** en dessous du couvercle du réservoir.

MODÈLE C43804-WH-RSL

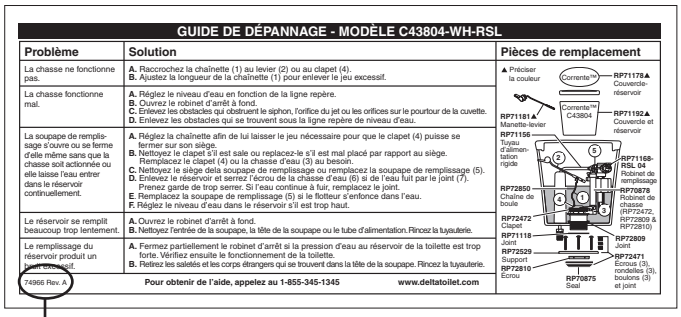

GUIDE DE DÉPANNAGE - MODÈLE C43804-WH-RSL

Problème	Solution
La chasse ne fonctionne pas.	**A.** Raccrochez la chaînette (1) au levier (2) ou au clapet (4). **B.** Ajustez la longueur de la chaînette (1) pour enlever le jeu excessif.
La chasse fonctionne mal.	**A.** Réglez le niveau d'eau en fonction de la ligne repère. **B.** Ouvrez le robinet d'arrêt à fond. **C.** Enlevez les obstacles qui obstruent le siphon, l'orifice du jet ou les orifices sur le pourtour de la cuvette. **D.** Enlevez les obstacles qui se trouvent sous la ligne repère de niveau d'eau.
La soupape de remplissage s'ouvre ou se ferme d'elle même sans que la chasse soit actionnée ou elle laisse l'eau entrer dans le réservoir continuellement.	**A.** Réglez la chaînette afin de lui laisser le jeu nécessaire pour que le clapet (4) puisse se fermer sur son siège. **B.** Nettoyez le clapet s'il est sale ou replacez-le s'il est mal placé par rapport au siège. Remplacez le clapet (4) ou la chasse d'eau (3) au besoin. **C.** Nettoyez le siège dela soupape de remplissage ou remplacez la soupape de remplissage (5). **D.** Enlevez le réservoir et serrez l'écrou de la chasse d'eau (6) si de l'eau fuit par le joint (7). Prenez garde de trop serrer. Si l'eau continue à fuir, remplacez le joint. **E.** Remplacez la soupape de remplissage (5) si le flotteur s'enfonce dans l'eau. **F.** Réglez le niveau d'eau dans le réservoir s'il est trop haut.
Le réservoir se remplit beaucoup trop lentement.	**A.** Ouvrez le robinet d'arrêt à fond. **B.** Nettoyez l'entrée de la soupape, la tête de la soupape ou le tube d'alimentation. Rincez la tuyauterie.
Le remplissage du réservoir produit un bruit excessif.	**A.** Fermez partiellement le robinet d'arrêt si la pression d'eau au réservoir de la toilette est trop forte. Vérifiez ensuite le fonctionnement de la toilette. **B.** Retirez les saletés et les corps étrangers qui se trouvent dans la tête de la soupape. Rincez la tuyauterie.

74966 Rev. A

Pour obtenir de l'aide, appelez au 1-855-345-1345 **www.deltatoilet.com**

Pièces de remplacement

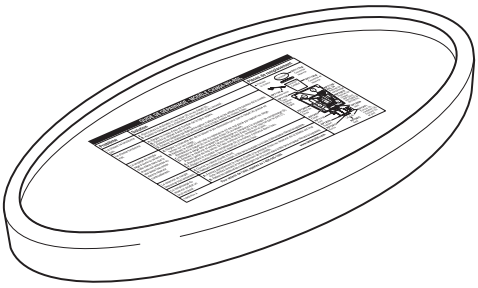

Apposez l'étiquette **(74966)** en dessous du couvercle du réservoir.

MODELS C41901 AND C43901

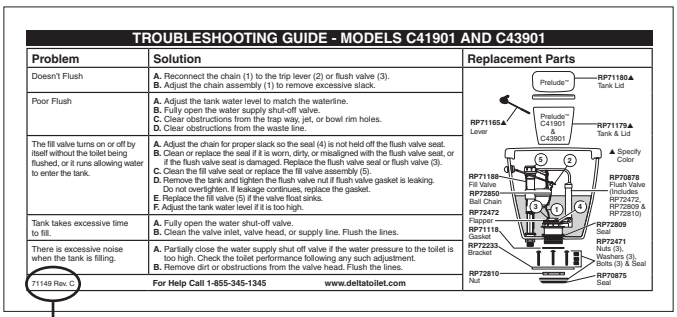

TROUBLESHOOTING GUIDE - MODELS C41901 AND C43901

Problem	Solution
Doesn't Flush	**A.** Reconnect the chain (1) to the trip lever (2) or flush valve (3). **B.** Adjust the chain assembly (1) to remove excessive slack.
Poor Flush	**A.** Adjust the tank water level to match the waterline. **B.** Fully open the water supply shut-off valve. **C.** Clear obstructions from the trap way, jet, or bowl rim holes. **D.** Clear obstructions from the waste line.
The fill valve turns on or off by itself without the toilet being flushed, or it runs allowing water to enter the tank.	**A.** Adjust the chain for proper slack so the seal (4) is not held off the flush valve seat. **B.** Clean or replace the seal if it is worn, dirty, or misaligned with the flush valve seat, or if the flush valve seat is damaged. Replace the flush valve seal or flush valve (3). **C.** Clean the fill valve seat or replace the fill valve assembly (5). **D.** Remove the tank and tighten the flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues, replace the gasket. **E.** Replace the fill valve (5) if the valve float sinks. **F.** Adjust the tank water level if it is too high.
Tank takes excessive time to fill.	**A.** Fully open the water shut-off valve. **B.** Clean the valve inlet, valve head, or supply line. Flush the lines.
There is excessive noise when the tank is filling.	**A.** Partially close the water supply shut off valve if the water pressure to the toilet is too high. Check the toilet performance following any such adjustment. **B.** Remove dirt or obstructions from the valve head. Flush the lines.

71149 Rev. C

For Help Call 1-855-345-1345 **www.deltatoilet.com**

Replacement Parts

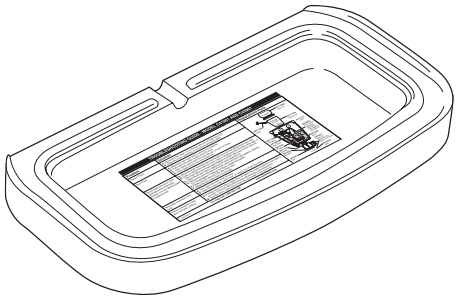

Affix the label (**71149**) to the underside of the tank lid.

74548

MODEL C43904

TROUBLESHOOTING GUIDE - MODEL C43904

Problem	Solution	Replacement Parts
Doesn't Flush	**A.** Reconnect the chain (1) to the trip lever (2) or flush valve (3). **B.** Adjust the chain assembly (1) to remove excessive slack.	
Poor Flush	**A.** Adjust the tank water level to match the waterline. **B.** Fully open the water supply shut-off valve. **C.** Clear obstructions from the trap way, jet, or bowl rim holes. **D.** Clear obstructions from the waste line.	
The fill valve turns on or off by itself without the toilet being flushed, or it runs allowing water to enter the tank.	**A.** Adjust the chain for proper slack so the seal (4) is not held off the flush valve seat. **B.** Clean or replace the seal if it is worn, dirty, or misaligned with the flush valve seat, or if the flush valve seat is damaged. Replace the flush valve seal or flush valve (3). **C.** Clean the fill valve seat or replace the fill valve assembly (5). **D.** Remove the tank and tighten the flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues, replace the gasket. **E.** Replace the fill valve (5) if the valve float sinks. **F.** Adjust the tank water level if it is too high.	
Tank takes excessive time to fill.	**A.** Fully open the water shut-off valve. **B.** Clean the valve inlet, valve head, or supply line. Flush the lines.	
There is excessive noise when the tank is filling.	**A.** Partially close the water supply shut off valve if the water pressure to the toilet is too high. Check the toilet performance following any such adjustment. **B.** Remove dirt or obstructions from the valve head. Flush the lines.	

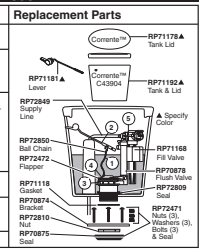

74299 Rev. B

For Help Call 1-855-345-1345 **www.deltatoilet.com**

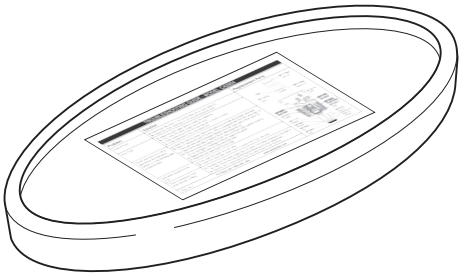

Affix the label (**74299**) to the underside of the tank lid.

MODEL C43904-WH-RSL

TROUBLESHOOTING GUIDE - MODEL C43904-WH-RSL

Problem	Solution	Replacement Parts
Doesn't Flush	**A.** Reconnect the chain (1) to the trip lever (2) or flush valve (3). **B.** Adjust the chain assembly (1) to remove excessive slack.	
Poor Flush	**A.** Adjust the tank water level to match the waterline. **B.** Fully open the water supply shut-off valve. **C.** Clear obstructions from the trap way, jet, or bowl rim holes. **D.** Clear obstructions from the waste line.	
The fill valve turns on or off by itself without the toilet being flushed, or it runs allowing water to enter the tank.	**A.** Adjust the chain for proper slack so the seal (4) is not held off the flush valve seat. **B.** Clean or replace the seal if it is worn, dirty, or misaligned with the flush valve seat, or if the flush valve seat is damaged. Replace the flush valve seal or flush valve (3). **C.** Clean the fill valve seat or replace the fill valve assembly (5). **D.** Remove the tank and tighten the flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues, replace the gasket. **E.** Replace the fill valve (5) if the valve float sinks. **F.** Adjust the tank water level if it is too high.	
Tank takes excessive time to fill.	**A.** Fully open the water shut-off valve. **B.** Clean the valve inlet, valve head, or supply line. Flush the lines.	
There is excessive noise when the tank is filling.	**A.** Partially close the water supply shut off valve if the water pressure to the toilet is too high. Check the toilet performance following any such adjustment. **B.** Remove dirt or obstructions from the valve head. Flush the lines.	

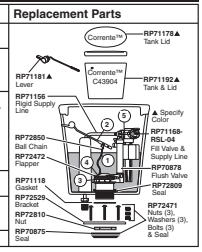

74300 Rev. B

For Help Call 1-855-345-1345 **www.deltatoilet.com**

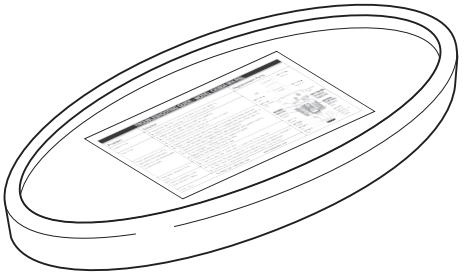

Affix the label (**74300**) to the underside of the tank lid.

MODEL C43906

TROUBLESHOOTING GUIDE - MODEL C43906

Problem	Solution	Replacement Parts
Doesn't Flush	**A.** Reconnect the chain (1) to the trip lever (2) or flush valve (3). **B.** Adjust the chain assembly (1) to remove excessive slack.	
Poor Flush	**A.** Adjust the tank water level to match the waterline. **B.** Fully open the water supply shut-off valve. **C.** Clear obstructions from the trap way, jet, or bowl rim holes. **D.** Clear obstructions from the waste line.	
The fill valve turns on or off by itself without the toilet being flushed, or it runs allowing water to enter the tank.	**A.** Adjust the chain for proper slack so the seal (4) is not held off the flush valve seat. **B.** Clean or replace the seal if it is worn, dirty, or misaligned with the flush valve seat, or if the flush valve seat is damaged. Replace the flush valve seal or flush valve (3). **C.** Clean the fill valve seat or replace the fill valve assembly (5). **D.** Remove the tank and tighten the flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues, replace the gasket. **E.** Replace the fill valve (5) if the valve float sinks. **F.** Adjust the tank water level if it is too high.	
Tank takes excessive time to fill.	**A.** Fully open the water shut-off valve. **B.** Clean the valve inlet, valve head, or supply line. Flush the lines.	
There is excessive noise when the tank is filling.	**A.** Partially close the water supply shut off valve if the water pressure to the toilet is too high. Check the toilet performance following any such adjustment. **B.** Remove dirt or obstructions from the valve head. Flush the lines.	

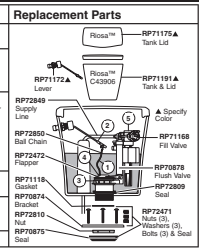

72408 Rev. D

For Help Call 1-855-345-1345 **www.deltatoilet.com**

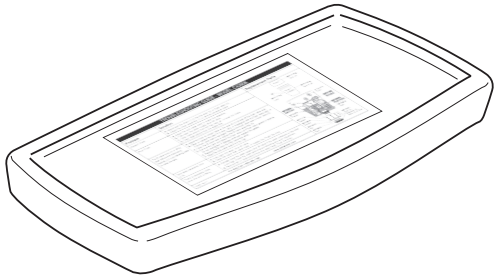

Affix the label (**72408**) to the underside of the tank lid.

MODEL C43906-WH-RSL

TROUBLESHOOTING GUIDE - MODEL C43906-WH-RSL

Problem	Solution	Replacement Parts
Doesn't Flush	**A.** Reconnect the chain (1) to the trip lever (2) or flush valve seal (flapper) (4). **B.** Adjust the chain assembly (1) to remove excessive slack.	
Poor Flush	**A.** Adjust the tank water level to match the waterline. **B.** Fully open the water supply shut-off valve. **C.** Clear obstructions from the trap way, jet, or bowl rim holes. **D.** Clear obstructions from the waste line.	
The fill valve turns on or off by itself without the toilet being flushed, or it runs allowing water to enter the tank.	**A.** Adjust the chain for proper slack so the seal (flapper) (4) is not held off the flush valve seat. **B.** Clean or replace the seal (flapper) if it is worn, dirty, or misaligned with the flush valve seat, or if the flush valve seat is damaged. Replace the flush valve seal (flapper) or flush valve (3). **C.** Clean the fill valve seat or replace the fill valve assembly (5). **D.** Remove the tank and tighten the flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues, replace the gasket. **E.** Replace the fill valve (5) if the valve float sinks. **F.** Adjust the tank water level if it is too high.	
Tank takes excessive time to fill.	**A.** Fully open the water shut-off valve. **B.** Clean the valve inlet, valve head, or supply line. Flush the lines.	
There is excessive noise when the tank is filling.	**A.** Partially close the water supply shut off valve if the water pressure to the toilet is too high. Check the toilet performance following any such adjustment. **B.** Remove dirt or obstructions from the valve head. Flush the lines.	

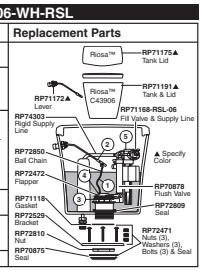

73318 Rev. D

For Help Call 1-855-345-1345 **www.deltatoilet.com**

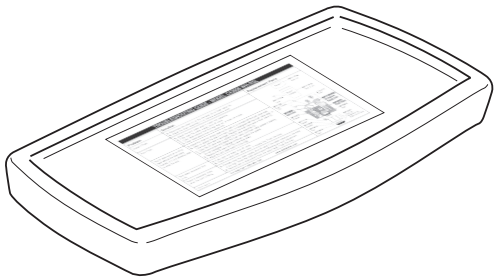

Affix the label (**73318**) to the underside of the tank lid.